




INSTALLATION INSTRUCTIONS


| | | |
|---|------------------------------------|--------------------------------------|
| Accessory SPLASH GUARDS P/N 08P00-TM8-100A | Application 2014 INSIGHT | Publications No. All 50653 |
| | | Issue Date OCT 2013 |

PARTS LIST

Left front splash guard

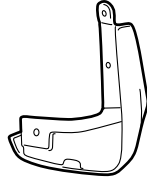

Right front splash guard

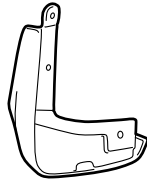


Left rear splash guard



Right rear splash guard



10 Self-tapping screws



4 Spring nuts



2 Collars



TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver


Stubby Phillips screwdriver

Pushpin

Ratchet

10 mm Socket

Illustration of the Splash Guards on the Vehicle

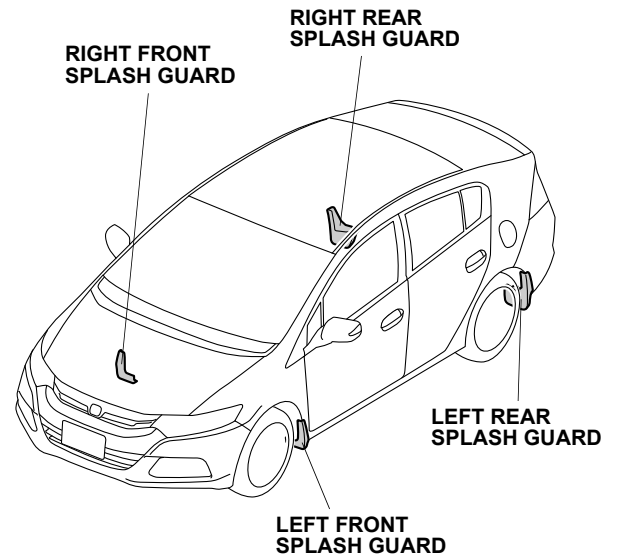

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by “do-it-yourselfers.”

NOTE:


- These instructions show the left splash guards being installed. The same procedure applies to installing the right splash guards.
- Clean the areas to be covered and wax them with a high quality paste wax.

Installing the Front Splash Guards

1. Turn the steering wheel fully counterclockwise.
2. Using a pushpin, pierce the centers of three vehicle clips on the left front inner fender.

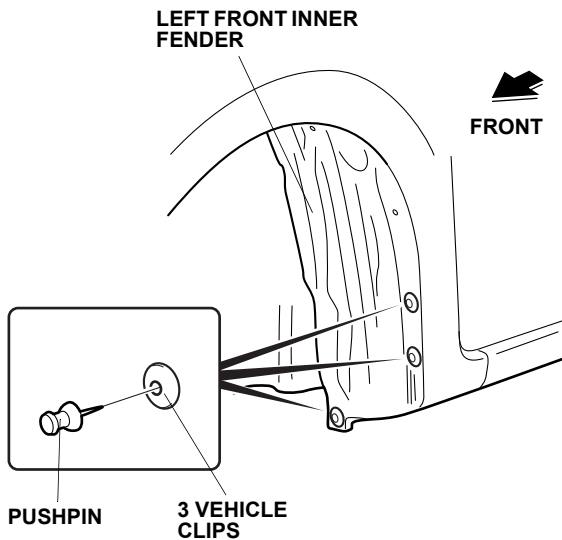


3. Secure the left front splash guard with three self-tapping screws. Secure the self-tapping screws in the order 1 → 2 → 3. If there is a gap between the left front splash guard and the vehicle, loosen the self-tapping screws, adjust the splash guard so there is no gap, then retighten them.

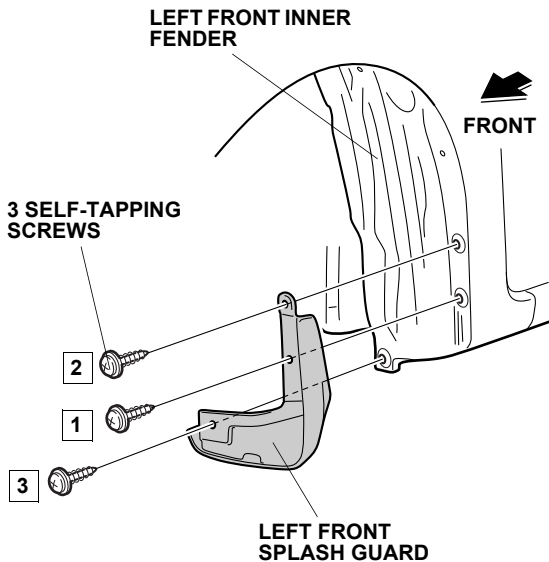


4. Turn the steering wheel all the way clockwise and repeat steps 1 through 3 to install the right front splash guard.

Installing the Rear Splash Guards

5. Remove one bolt from the bottom of the rear bumper.

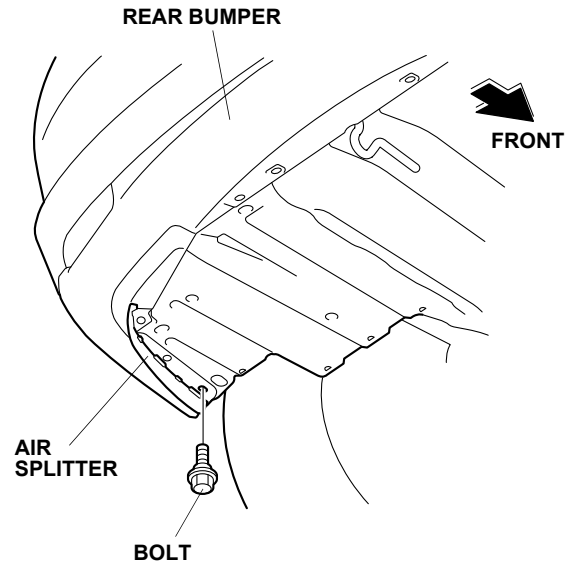


6. Using a pushpin, pierce the centers of the two dimples in the rear bumper.

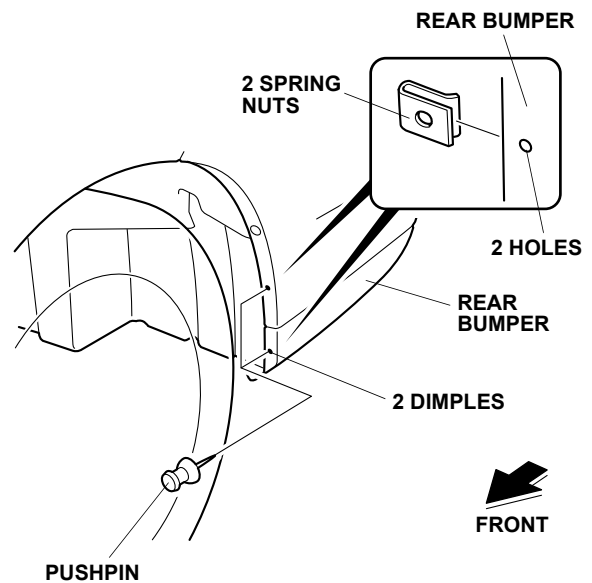

7. Install two spring nuts over the pierced holes in the rear bumper. Make sure the spring nuts are installed correctly.

8. Secure the left rear splash guard with two self-tapping screws, one collar, and one bolt in the order **1** → **2** → **3**. If there is a gap between the left rear splash guard and the vehicle, loosen the self-tapping screws and bolt, adjust the splash guard so there is no gap, then retighten them.

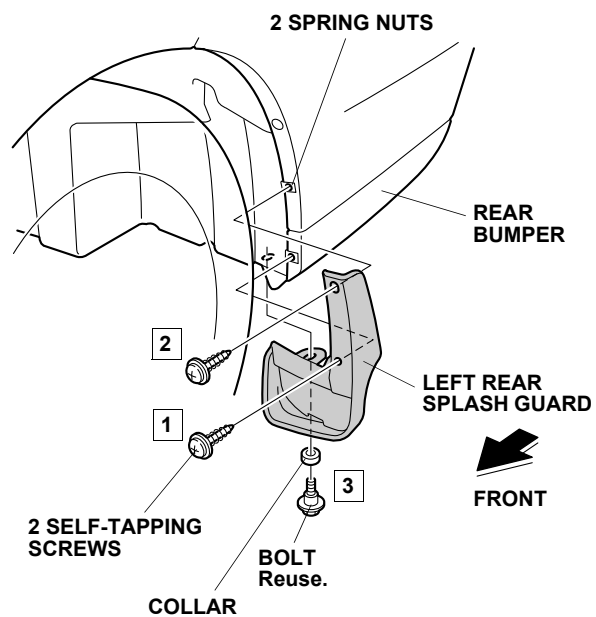

9. Repeat steps 5 through 8 to install the right rear splash guard.